

 
# BUSH

## QUICK SETUP GUIDE

CDVD90W2SW

1

1. Remove the battery cover (as shown).
2. Insert 2 x AAA batteries, taking note that the polarities match up.
3. Replace the battery cover.

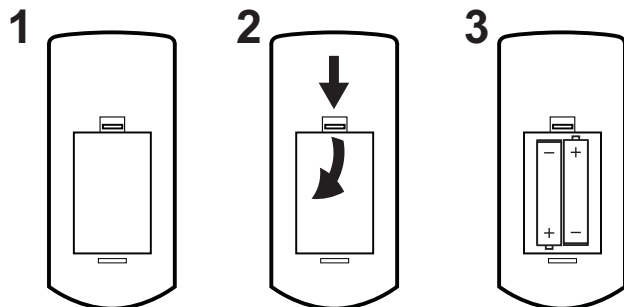


2

**Before using the built-in battery, please make sure it is fully charged.**


Slide the power switch to the **OFF** position and connect the DC adaptor to the DC input & mains supply. When the battery is fully charged the red LED charging indicator will go off.

**NOTE:** The battery can only be charged when the power switch is set to **OFF**.

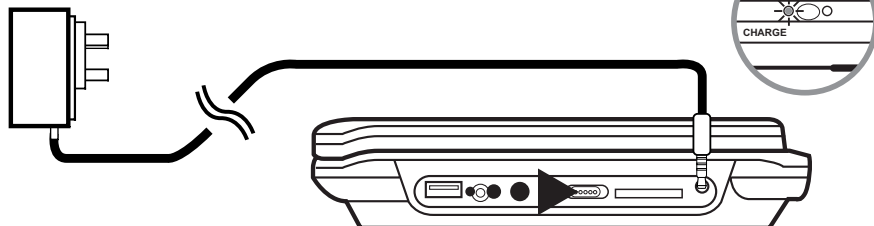

3


1. Remove the Protective disc from the tray.
2. Slide the power switch to **ON**.
3. Insert a DVD and close the tray lid
4. Wait a few seconds for the disc to be read.
5. The DVD will begin to play automatically.

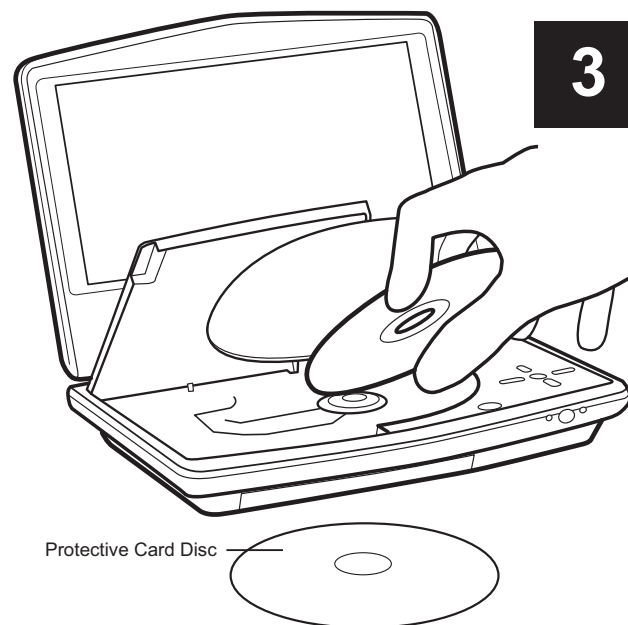

4

**Please refer to page 5 of the supplied manual for remote control & button layout functions.**

1. Use the navigation buttons on either the main unit or the remote control to navigate the DVD menu.
2. Press the **OK** or **ENTER** button to select the menu item and begin playback of the DVD disc.

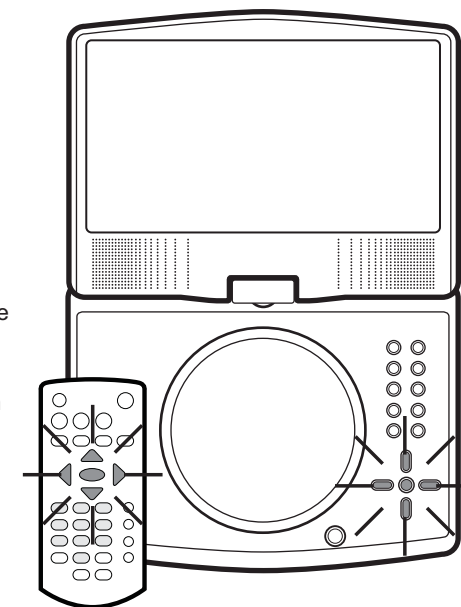


If you have damaged or missing parts,  
call the Customer Helpline: **0870 600 3030**

# BUSH - Portable DVD player

 Installation & User Instructions – Please keep for future reference

533/8887 (D)

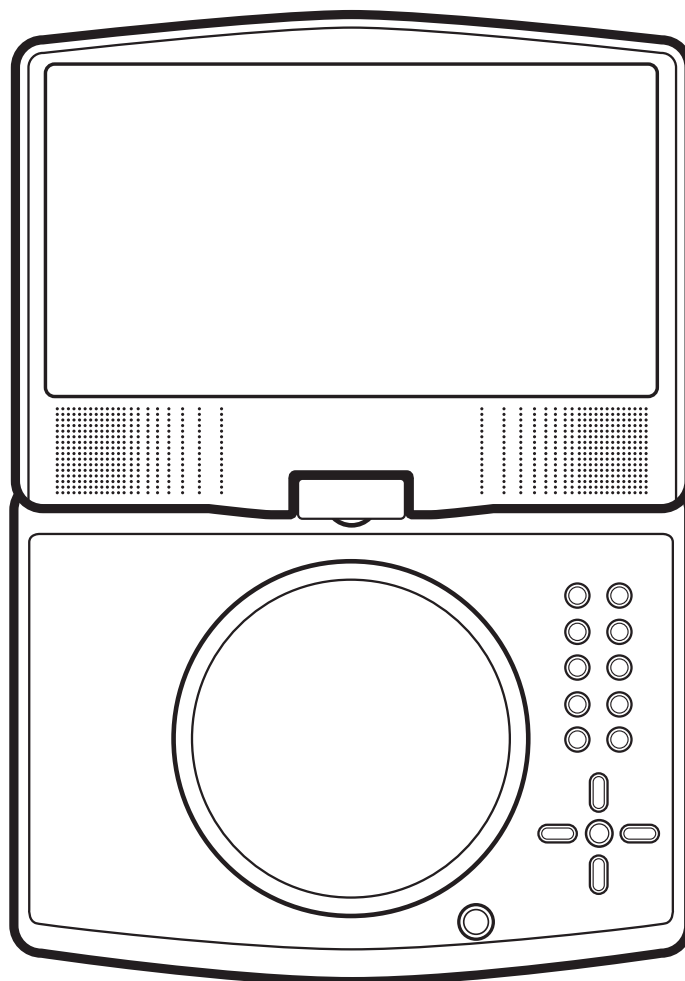


**Important** – Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance.

If you need help or have damaged or missing parts, call the Customer **Helpline: 0870 600 3030**

# Contents
 
<b>Safety Information</b>	<b>2-4</b>
Safety precaution	3
Warning	4
<b>Functions &amp; Controls</b>	<b>5</b>
<b>Installation</b>	<b>6-7</b>
Remote control battery installation	6
Connection to a TV	6
Electrical connection	7
<b>User Instructions</b>	<b>8-11</b>
Supported Formats	8
Charging the built-in battery	8
Getting started	8
Setting the volume level	8
Skipping forward and back	8
Rapid advance and reverse	8
Slow motion playback (DVD only)	8
Repeat playback	8
Search for a specific scene or title	9
Program playback (up to 16 tracks)	9
Zoom function	9
On-screen display	9
Brightness and colour adjustments	9
Changing the audio sound track (DVD)	9
Multi-angle viewing	9
Changing the subtitle track (DVD only)	9
Return to the main menu (DVD only)	10
Kodak Picture CD / JPG playback	10
Additional slide show functions	10
USB, SD & MMC operation	10
Slide show	10
Video Playback	11
Supported video formats and standards	11
Supported media formats	11
Switching media inputs	11
Listening with earphones	11
<b>The Setup Menu</b>	<b>12-14</b>
System Setup menu	12
Language Setup menu	13
Video Setup menu	13
Speaker Setup menu	14
<b>Care and Maintenance</b>	<b>14</b>
<b>Troubleshooting</b>	<b>14</b>
<b>Technical Specifications</b>	<b>15</b>
Disposal information	15
<b>Guarantee</b>	<b>16</b>

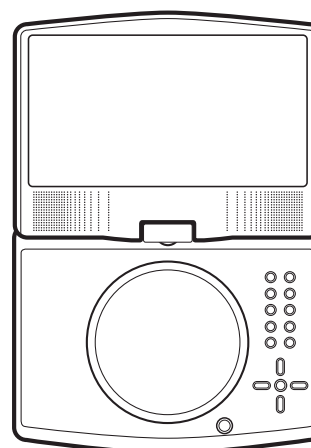

## Product Codes

CDVD90W2SW



## Safety Information

**Important** – Please read these instructions fully before installation

### Before Use

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** place the appliance near a heat source such as radiators, heat registers, stoves or other products that produce heat.
- Slots and openings in the cabinet are provided for ventilation and to ensure operation of the product. These openings must not be blocked or covered by placing the product on bed, sofa, rug or others.
- The appliance shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the appliance.
- **Do not** use attachments not recommended by the manufacturer as they may cause hazards.
- **Do not** place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to users and damage to the product. Use the accessories that recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
- Keep your fingers well clear of the disc tray as it is closing. Neglecting may cause serious personal injury and damage to the product.
- **Do not** place heavy object or step on the product.
- This appliance must be positioned so that the plug is accessible.
- For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power line surges.
- Rating label is located at the bottom of the unit.

### During Use

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- **Do not** push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- The top and rear panels of the product may become warm after a long period of use. This is not a malfunction.
- When the unit is not in use, remove the disc and turn off the power.
- If you do not use the unit for a long period, the unit may not function properly in the future. Turn on and use the unit occasionally.
- **Do not** place foreign objects on the tray.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline: 0870 600 3030



## Safety Information

**Important** – Please read these instructions fully before installation

### Safety Precautions



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The symbol for CLASS II (Double Insulation).

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture, dangerous high voltages are present inside the enclosure. Do not open the cabinet, refer servicing to qualified personnel only.

**CAUTION:** When replacing the direct plug in power supply or a separable, cord-connected power supply, the replacement must be exact duplicate, or one recommended by the manufacturer.

This is a CLASS-1 laser product. Use of controls or adjustments or procedures other than those specified herein, may result in hazardous laser light beam exposure. Do not open the cover and do not repair yourself. Refer servicing to qualified personnel.



**DANGER:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.

### Locations

- Do not locate the unit in places near heating devices, high temperature (40C or higher), high humidity (90% or higher), dirty places and avoid direct exposure to sunshine.
- The pick up may be condensed with water under the following situation.
  - From a cold place to warm place
  - Operates in a room where the heater is just turned on, or a place where the cold air from the air conditioner directly hits the unit.
  - During summer, the unit moves from an air conditioned room to a hot and humid place.
  - A room is vaporous or damp.
- If condensation exists, the unit will not operate properly. Remove the disc, power up the unit and leave it for two to three hours. The unit will warm up and evaporate any moisture.

## Warning

**Important** – Please read these instructions fully before using

### Disc handling


- Do not touch the playback side of the disc.
- Do not attach paper or tape to disc.



- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.



- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl. It may damage the disc.
- Do not store discs in a place subject to direct sunlight or near heat source.
- Do not store discs in a place subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case, stacking or placing object on discs outside or their case may cause warping.
- Normally, DVD discs are divided into titles, and the titles are sub-divided into chapters. Audio CD discs are divided into tracks.

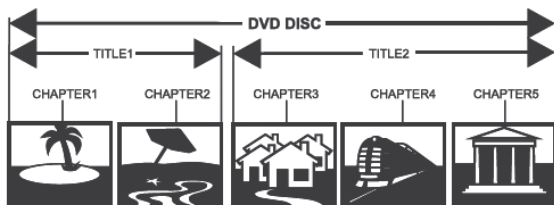

- Each title, chapter, or track is assigned a number, which is called title number, chapter number or track number respectively. There may be discs that do not have these numbers.

### Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

#### Disc types



- Audio and Video

Disc size 12cm  
Single side, single layer / single side, double layer  
PAL and NTSC DVD disc  
Playback time 135min / 240min max



- Audio

Disc size 12cm / 8cm CD disc Playback time 74min/20min max

#### JPEG - Picture

JPG format disc

\* Player is DVD-Video, DVD+/-R, DVD+/-RW, CD-DA, CD-R, CD-RW compatible.

#### Region Management Information

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD player cannot play that disc.

The Region number of this DVD player is



 
# Functions & Controls

If you have damaged or missing parts,  
call the Customer Helpline: 0870 600 3030

Please familiarize yourself with the parts and accessories listed below


## Accessories included

Mains adaptor, DVD Player, Remote, Manual, Quick setup guide,  
Batteries x 2 AAA, Earphones



## Others
 
## Main Panel



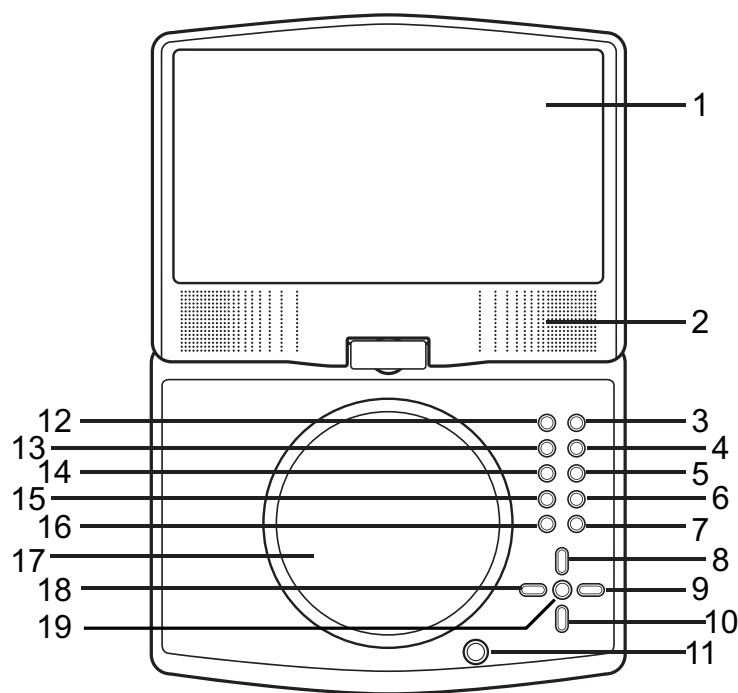


1. TFT display
2. Speakers
3. DISPLAY button
4. SETUP button
5. ►► SKIP UP / F.FWD button
6. ►/|| PLAY/PAUSE button
7. VOLUME + button
8. NAVIGATION UP button
9. NAVIGATION RIGHT button
10. NAVIGATION DOWN button
11. DISC Lid OPEN button
12. AUDIO button
13. MENU button
14. ◀◀ SKIP BACK / F.BWD button
15. STOP/DVD/USB/CARD button
16. VOLUME - button
17. DISC lid
18. NAVIGATION LEFT button
19. ENTER button

20. Built-In Rechargeable battery
21. Charge indicator
22. Remote IR sensor
23. Power indicator
24. USB port
25. PHONES output
26. AUDIO/VIDEO output
27. POWER ON/OFF switch
28. SD/MMC card input
29. DC POWER input

## REMOTE CONTROL

   1. SCREEN ON/OFF & BRIGHTNESS / COLOUR button
2. TITLE button
3. ◀◀ SKIP BACK / F.BWD button
4. ►► SKIP UP / F.FWD button
5. NAVIGATION buttons

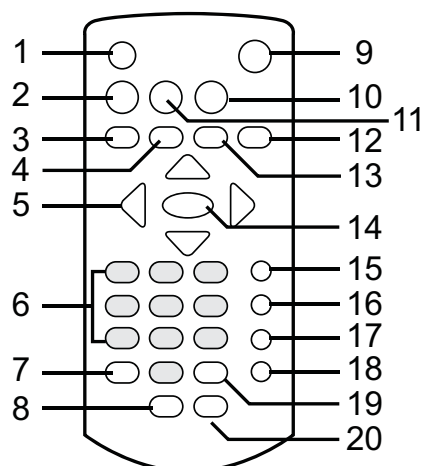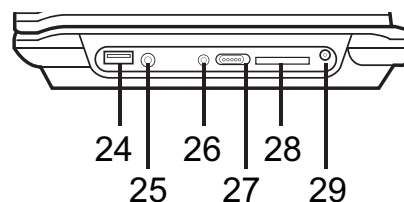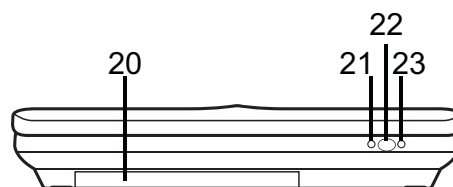

6. NUMERIC buttons
7. PROGRAM / ANGLE button
8. VOLUME - button
9. MUTE button
10. SETUP button
11. MENU button
12. DISPLAY button
13. STOP / DVD/USB/CARD button
14. OK/PLAY/PAUSE button
15. SUBTITLE button
16. AUDIO button
17. SEARCH button
18. REPEAT button
19. ZOOM / SLOW button
20. VOLUME + button

# Installation


## Remote control battery installation

1. Remove the battery cover (as shown).
2. Insert 2 x AAA batteries, taking note that the polarities match up.
3. Replace the battery cover, in the same manner as you removed it.



### Notes on battery usage


- Do not insert battery into the remote control in the wrong direction.
- Do not charge, heat, open or short-circuit the battery. Do not throw battery into a fire.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones.
- Improper replacement of batteries may result in explosive hazard. It must be replaced only by batteries with the same or equivalent type.

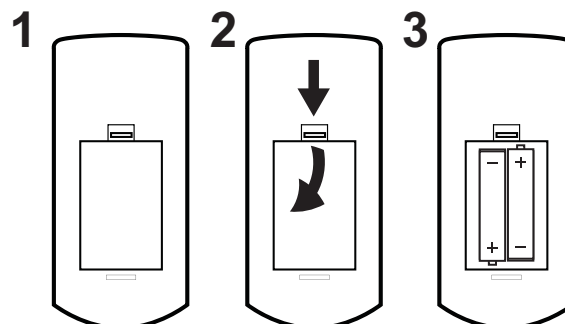

## Connection to a TV

**NOTE:** before attempting to connect this unit to a TV, ensure that the CDVD90W2SW and TV are both switched off.

1. Insert the 3.5mm end of an AV cable (not supplied ) into the **AV OUT** socket on the side of the unit.
2. Insert the other ends ( coloured red, white & yellow ) into your TV or amplifier.
3. The red & white sockets carry audio. They can be connected to either the TV inputs or an external amplifier. Take note to match the colours when connecting.
4. The yellow cable is the video cable and must be connected to the yellow video input on your TV.

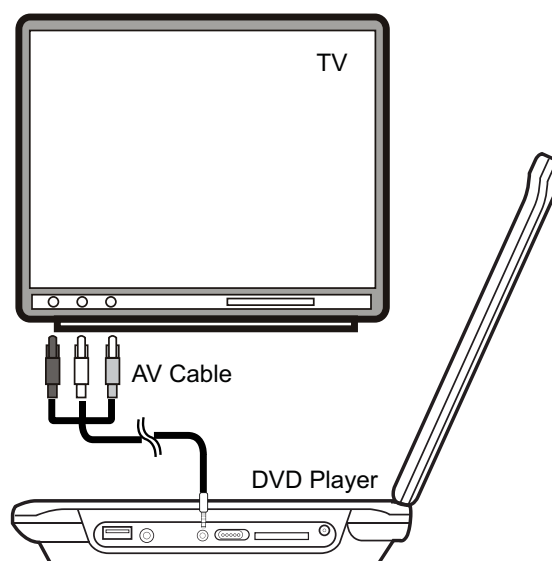



# Installation

## Electrical connection



**Any electrical work that is required to install this appliance MUST be carried out by a qualified electrician.**

**Before making any electrical connections, ensure the following:**

- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- The use of multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket.
- The main plug is used as the disconnect device, the disconnect device shall remain readily operable.
- In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

# User Instructions

## Supported Formats

- Full compatibility with DVD, CD, Kodak picture CD, CD-R & CD-RW
- Multi-language, multi-angle, multi-subtitle, multi-mode of image zoom, parental control



Dolby Digital



Audio CD



Multi-Angle



DVD Video



Subtitle Choices



TV aspect ratio modes

## Charging the built-in battery

The CDVD90W2SW is fitted with a built-in rechargeable battery.

**Before using the battery, please make sure it is fully charged.**

Slide the power switch to the **OFF** position and connect the DC adaptor to the DC input (28) & mains supply. When the battery is fully charged the red LED charging indicator will go off.



### NOTE:

1. The battery can only be charged when the power switch is set to **OFF**.
2. If the unit is not in use for a prolonged period of time, it is recommended to charge the built-in battery every three months.

## Getting started

- Slide the **POWER** switch to the **ON** position to turn on the player (the green power LED will light up).
- Press the disc lid button to open the disc tray.
- Place a DVD disc onto the disc tray (label facing upwards).
- Close the disc tray and the playback starts automatically.
- When a menu screen appears on the screen, use the navigation buttons to select the menu option you require, then press the **PLAY/PAUSE** button to start playback.

## Setting the volume level

1. Use the **VOLUME - / +** buttons on either the main unit or remote to increase or decrease the listening level.
2. Use the **MUTE** button to silence the audio, press again to resume.

## Skipping forward and back

Press either **PREVIOUS** ◀◀ or **NEXT** ▶▶ buttons during playback to skip a chapter (DVD) or a track (CD) ahead or backwards.

## Rapid advance and reverse

During playback, press and hold either the ▶▶ or ◀◀ buttons to initiate fast scan at X2, keep the button pressed to cycle through X2, X4, X8 X20 and normal speed. When you reach the required speed setting release the button. Press the **PLAY/PAUSE** button to resume normal play.

## Stopping playback

Press the **STOP** button on either the main unit or remote control to stop playback. To resume playback from the stopped position, press **PLAY/PAUSE** again. To reset the playback position memory press the **STOP** button twice or open the disc lid.

## Slow motion playback (DVD only)

Press and hold the **SLOW** button during playback, the disc will be played at 1/2 normal speed at first, each time this button is pressed (and held), the play speed becomes slower (down to 1/7 normal speed).

Press the **PLAY/PAUSE** button, to resume normal playback.

## Repeat playback

1. Press the **REPEAT** button once during DVD playback to activate the **REPEAT TITLE**, press again to activate **REPEAT ALL**, once more turns **OFF** the repeat function.
2. Press the **REPEAT** button during CD playback activates **REPEAT TRACK**, a second press activates **REPEAT DISC**, once more turns **OFF** the repeat function.

# User Instructions

## Repeat playback

3. The **REPEAT A-B** function allows you to repeat a section between point **A** and point **B**.

## Search for a specific scene or title

To find a specific time code on a disc you can use the **SEARCH** function.

1. Press the **SEARCH** button during playback to activate the search options.
2. Use the navigation buttons to select the correct option you wish to set.
3. Use the numeric buttons to enter the Title, Chapter or Chapter time.
4. Press the **OK** button (remote) or **ENTER** (main unit) to jump to the set position.

## Program playback (up to 16 tracks)

1. Press the **PROGRAM** button
2. A list of tracks 1-16 will appear on the display with \_\_\_\_ next to them.
3. Use the navigation buttons to select the space next to the playback number.
4. Use the numeric buttons to enter the playback order.
5. Once setup navigate to **PLAY** option and press **ENTER/OK**.
6. To clear the setup screen navigate to **CLEAR** and press **ENTER/OK**.

## Zoom function

To use the zoom function, press the **ZOOM** button to activate the default zoom setting **ZOOM 2**. Every subsequent press cycles through the zoom options eg: **ZOOM 2**, **ZOOM 3**, **ZOOM 4**, **ZOOM 1/2**, **ZOOM 1/3** & **ZOOM 1/4**. The next press will return to the **OFF** setting.

## On-screen display

When playing a disc, pressing the **DISPLAY** button will display various information about the playing disc. EG: Current disc type, Title number, Chapter number, Playtime, Audio language, Audio type, Subtitle language and Multi angle. You will need to press the **DISPLAY** button a few times to view all the info another press will hide the display info.

## Brightness and colour adjustments

To adjust the colour and brightness settings, press the **BRI/COL** button on the remote.

One press activates the **BRIGHTNESS** setting. Use the navigation buttons to adjust the levels. A second press of the **BRI/COL** button activates the **COLOUR** setting. This is adjusted in the same manner.

When finished just leave the buttons untouched for a few seconds and the menu will disappear.

## Changing the audio sound track (DVD)

When viewing a DVD, you may wish to change the audio track for example. You wish to use a 2 channel version instead of 5.1, you may require another language other than the default.

1. Press the **AUDIO** button, every press will cycle through the available audio tracks, and the details will be displayed on the screen.



**NOTE:** This function is only available on discs with multiple audio tracks.

When no extra audio tracks are available, pressing the button will do nothing.

## Multi-angle viewing

Press and hold the **ANGLE** button to select the desired angle you wish to view the scene in.



**NOTE:** Not all DVD discs have multi-angles and as such pressing the button will do nothing.

## Changing the subtitle track (DVD only)

You may wish to watch a DVD with a subtitle track enabled.

To activate and choose the correct subtitle track follow these steps.

1. Press the **SUBTITLE** button to view the first subtitle option.
2. Press repeatedly to cycle through the available subtitle options.
3. When you have found the track you wish to view release the button for a few seconds to activate.
4. To cancel press the **SUBTITLE** button until you see **[OFF]**.

# User Instructions

## Return to the main menu (DVD only)

Press the **MENU** button to return to the main menu, press the **TITLE** button to play the title.

## Kodak Picture CD / JPG playback

1. Insert a Kodak Picture CD / JPG Picture CD into the disc tray
2. Use the navigation buttons to select the appropriate option when the menu appears.
3. A slide show of the picture CD will begin to play automatically. To start a slide show at any point press the **OK/ENTER** button.
4. If you wish to view a specific image then press the **STOP** button to return to the list of folders & images.
5. Use the navigation buttons to select the image or folder you wish to view. If the image is within a folder, press **OK/ENTER** to open the folder. Press **OK/ENTER** again to view the image.
6. As you peruse the images you will notice details appearing on the left hand section of the screen showing image resolution, file size and Date.



**NOTE:** To return to the main menu press the **TITLE** button.

## Additional slide show functions

### 1. PLAY MODES

Press the **REPEAT** button repeatedly to cycle through the available play modes. Press **STOP** to resume preview mode.

### 2. PICTURE ROTATION

Press the ◀ or ▶ navigation buttons to rotate the image Anti-Clockwise or Clockwise.

### 3. PICTURE FLIP

Press the ▲ or ▼ navigation buttons to flip the image.

### 4. PICTURE ZOOM

To use the zoom function, press the **ZOOM** button to activate the default zoom setting **ZOOM 2**. Every subsequent press cycles through the zoom options eg: **ZOOM 2**, **ZOOM 3**, **ZOOM 4**, **ZOOM 1/2**, **ZOOM 1/3** & **ZOOM 1/4**. The next press will return to the **OFF** setting.


### 5. SLIDE SHOW TRANSITIONS

During the slide show, pressing the **PROGRAM** button will cycle through all the available transition presets.

## USB, SD & MMC operation

To use an external memory stick or SD/MMC card.


1. Switch the unit **ON**.
2. Insert the memory device into the required slot. SD/MMC goes into (27) and USB goes into (23).
3. The unit will read the device and start the media selection screen (unless a disc is present in the tray, if so then press and hold the **STOP** button to activate the media selection menu).

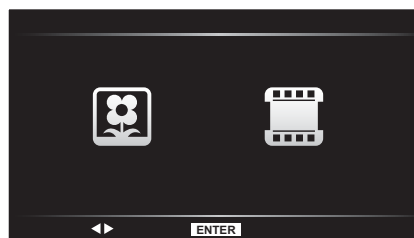

4. Use the navigation buttons to select the appropriate option when the menu appears. And press the **OK/ENTER** button to activate.

## Slide show

1. When the image viewer option is activated you will see this screen.

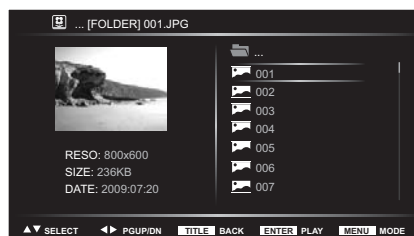

2. Use the the ▲ or ▼ navigation buttons to scroll through the list of images. Pressing the ◀ or ▶ navigation buttons scrolls page **UP** or **DOWN**.
3. To start a slide show press **OK/ENTER** button.
4. If you wish to view a specific image then press the **STOP** or **MENU** button to return to the list of folders & images.
5. Use the navigation buttons to select the image or folder you wish to view. if the image is within a folder, press **OK/ENTER** to open the folder. Press **OK/ENTER** again to view the image.
6. As you peruse the images you will notice details appearing on the left hand section of the screen showing image resolution, file size and Date.




**NOTE:** To return to the media main menu press the **MENU** button.

# User Instructions

## Video Playback

This unit is capable of playing MPEG encoded videos from the USB or SD/MMC inputs.

1. Activate the video playback menu from the media selection screen.

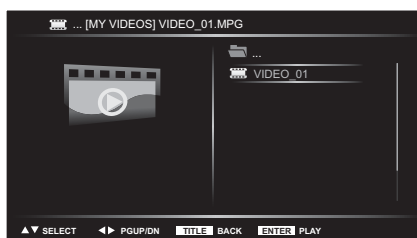

2. Use the the ▲ or ▼ navigation buttons to scroll through the list of videos. Pressing the ◀ or ▶ navigation buttons scrolls page **UP** or **DOWN**.
3. To start a video press the **OK/ENTER** button.



**NOTE:** To return to the media main menu press the **MENU** button.

## Supported video formats and standards

**Supported video standard:** MPEG1, MPEG2

**Supported audio standards:** MP1, MP2 & PCM

**Supported resolutions:** 352 x 240, 352 x 288

## Supported media formats

The below memory types are compatible with this unit. **SD, SDHC (up to 16GB), MMC & USB**

## Switching media inputs

It is possible to switch between inputs.  
For example: USB, SD and Disc.

1. Press and hold the **STOP** button
2. Quickly when the menu appears use the ◀ or ▶ navigation buttons to select the input you require.
3. Press **OK/ENTER** to select the input.

## Listening with earphones



- Listen at moderate volumes to avoid hearing damage.
- If you hear no sound during playing, do not turn up volume up as the music may suddenly begin at a high volume. Excessive sound pressure from earphones and headphones can cause hearing loss.
- To avoid damaging your ears, adjust the volume to the lowest safe level before playing, and turn up to the desired level when playback has started.

# The Setup Menu

## System Setup menu



**NOTE:** Use the navigation buttons to scroll up and down, left to right and press the OK/ENTER button to select.

### TV SYSTEM

Set this option to whatever type of disc you are watching. NTSC, PAL or AUTO (to set automatically).

### SCREEN SAVER

When the unit is not in use, the DVD logo will appear as a screen saver to prevent screen burn in. Choose **ON** or **OFF**.

### TV TYPE

Choose a setting between **4:3PS** ( pan and scan), **4:3LB** (letter box) or **16:9** (widescreen).

### PASSWORD

A password can be set to prevent unwanted usage of the unit.

1. Scroll down to the password option and press the ► navigation button to activate the password options.
2. Input the user password ( the default is **0000**).
3. To change the default password, press the ► button again to re-enter another password.
4. Press **ENTER** to confirm the new password.
5. You will need to enter the new password once more to allow usage.



**NOTE:** If you forget your user password the master password to unlock the system is (**8200**).

### RATING

You can set a system rating so only movies that fall within that rating can be played. Choose between: Kid Safe, G, PG, PG13, PG-R, R, NC-17 and Adult.

### DEFAULT

This setting when activated restores the default settings to the system.

The setup menu gives additional options for many of the functions. Below is a description of each function and what it does.

## SYSTEM SETUP

TV SYSTEM  
SCREEN SAVER  
TV TYPE  
PASSWORD  
RATING  
DEFAULT



**NOTE:** To navigate to the other Setup Screens, use the navigation buttons to set the selection to the top option (ie: the menu title eg: **SYSTEM SETUP**) and then use either ◀ or ▶ to cycle through the setup menus.

# User Instructions

## Language Setup menu

### OSD LANGUAGE

This sets the On Screen Display language.  
Choose between: English, German & French.

### AUDIO LANG

Choose the default audio setting. This means the DVD player will automatically select this language as the audio track ( if available ).

Choose between: English, Chinese, Japanese, French, Spanish, Portuguese, German & Latin.

### SUBTITLE LANG

Choose the default subtitle language.

Select between: English, Chinese, Japanese, French, Spanish, Portuguese, German & OFF.

### MENU LANG

This option sets the default DVD menu language, once set if the DVD you are watching contains a menu with your specified language that is used by default.

The options are: English, Chinese, Japanese, French, Spanish, Portuguese, German & Latin.

## LANGUAGE SETUP

OSD LANGUAGE  
AUDIO LANG  
SUBTITLE LANG  
MENU LANG

## Video Setup menu

### BRIGHTNESS

This option sets the brightness level. Use the navigation buttons ▲ or ▼ to increase or decrease the brightness.

### CONTRAST

This option sets the contrast level. Use the navigation buttons ▲ or ▼ to increase or decrease the contrast.

### HUE

This option sets the Hue adjustment. Use the navigation buttons ▲ or ▼ to increase or decrease the hue.

### SATURATION

This option sets the saturation levels.  
Use the navigation buttons ▲ or ▼ to increase or decrease the saturation.

## VIDEO SETUP

BRIGHTNESS  
CONTRAST  
HUE  
SATURATION

## User Instructions

### Speaker Setup menu

#### DOWNMIX

This option allows you to change the way the audio is assigned to each speaker

Choose from :

LT/RT - Left / Right mixed mode  
STEREO - Stereo audio output

#### SPEAKER SETUP

DOWNMIX

## Care and Maintenance



**Important: Always unplug the appliance from the power socket during cleaning and maintenance.**

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Clean the external surfaces with a damp soft cloth only. Never use abrasive products or solvents as it may damage the appliance.

## Troubleshooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below. If the problem persists, contact the retailer if the machine is still under guarantee.  
Customer **helpline: 0870 600 3030**

Problem	Solution
No Power/The unit suddenly switches off	<ul style="list-style-type: none"><li>• Make sure the adaptor is securely connected.</li><li>• Turn the power off, and back on again.</li><li>• Check the battery pack is correctly attached.</li></ul>
Remote control does not work	<ul style="list-style-type: none"><li>• Check the batteries are inserted in the correct direction, the + &amp; - symbols must match.</li><li>• The batteries may be flat. Replace with new ones.</li><li>• Ensure there are no obstacles between the remote &amp; the sensor.</li></ul>
No Picture or sound	<ul style="list-style-type: none"><li>• Check the disc you are using is compatible</li><li>• Do not use damaged/ scratched discs</li><li>• Check the label is facing upwards</li><li>• Check the volume level is sufficient to hear</li><li>• Check headphones are not connected, no sound will be heard from the speakers if connected.</li></ul>



## Technical Specifications

Power Source	DC
Power Consumption	9V
Supported TV systems	PAL, NTSC, AUTO
LCD Display	9"
Dimensions	242(L) 180(W) 42.6(H) mm
Supported Discs	CD, CD-R, CD-RW, DVD, DVD-R, DVD-RW, DVD+R, DVD+RW
Supported Memory formats	SD, MMC, USB



We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

This appliance complies with the following EEC directives:

2006/95/EEC Low voltage directive

2004/108/EEC EMC directive

### Disposal Information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

### Battery Disposal Information

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC. To safeguard the functionality and safety of your product, always take your product to an official collection point or service centre where a professional can remove the battery.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health. Please do not dispose of your batteries with your normal household waste.

always bring your product to a professional to remove the battery.

# Guarantee



## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Home Retail Group  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW